




Skubbebøjle / Kjørehåndtak / Push bar - VELA Tango 700-serien

Montagevejledning for skubbebøjle på VELA Tango 700-serien

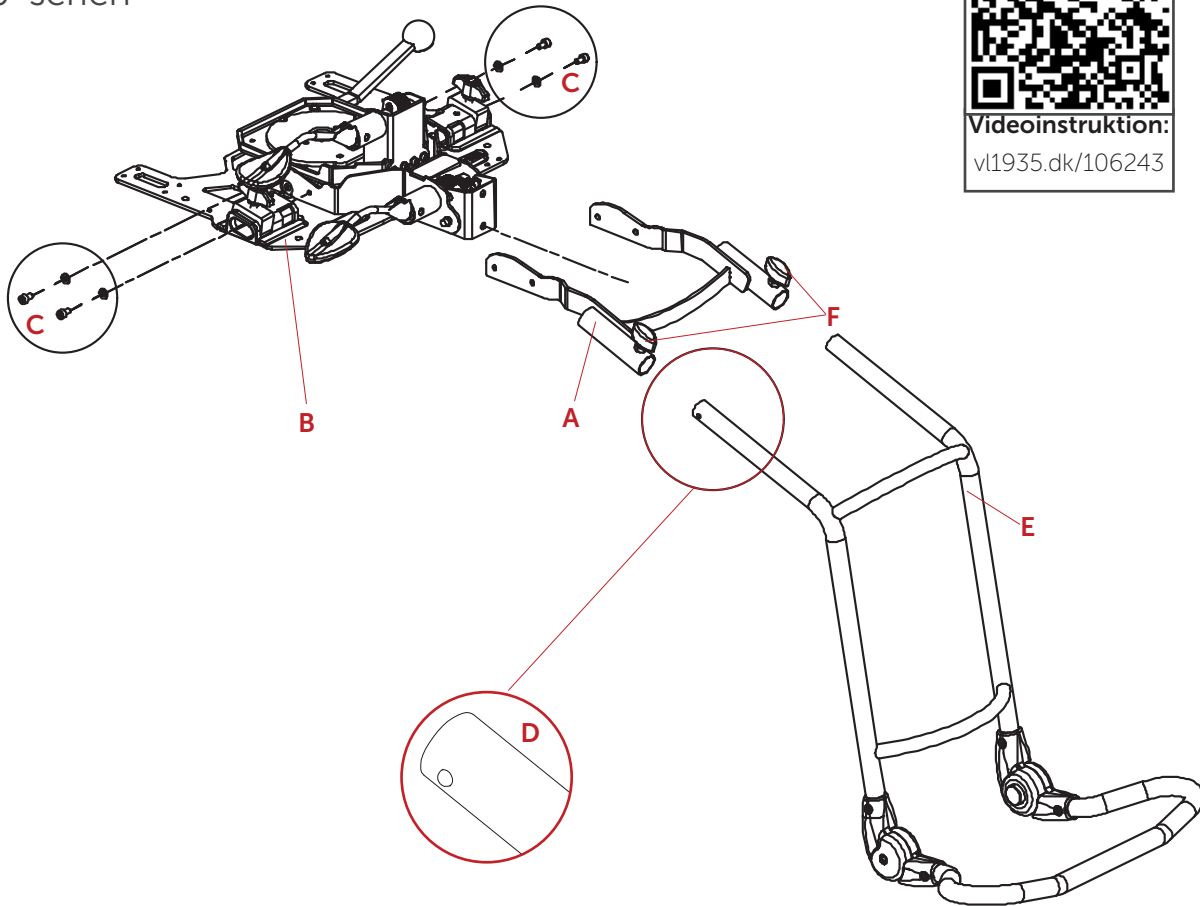

Videoinstruktion:
vl1935.dk/106243



Videoinstruktion:
vl1935.dk/106243e

DANSK

1. Holder for skubbebøjlen (A) skrues fast på begge sider af bærepladen (B) med de tilhørende skruer og skiver (C).
2. Tryk knopfjæderen ind (se detalje D) og sæt skubbebøjlen (E) i holderen (A) og spænd de to vingeskruer (F) godt fast i den ønskede position.

SVENSKA

1. Hållaren för skjutbygel (A) skruvas fast på båda sidor av bärplattan (B) med de medföljande skruvarna och brickorna (C).
2. Tryck in knappfjädern (se detalj D) och sätt skjutbygel (E) i hållaren (A) och dra åt de två vingmuttrarna (F) ordentligt i önskad position.

NORSK

1. Holderen for skyvebøylen (A) skrus fast på begge sider av bæreplaten (B) med de medfølgende skruene og skivene (C).
2. Trykk inn knappfjæren (se detalj D) og sett skyvebøylen (E) i holderen (A) og stram de to vingskruene (F) godt fast i ønsket posisjon.

ENGLISH

1. The holder for the push bar (A) is screwed onto both sides of the support plate (B) with the included screws and washers (C).
2. Press the button spring (see detail D) and insert the push bar (E) into the holder (A) and tighten the two wing screws (F) firmly in the desired position.