

SPARE PART INSTRUCTION

NR. **1.4.4** NAME **Spring loaded anti tippers**


VERSION 1.0 DATE 22-12-2021 BY NS

PAGE
1 of 2

5001614
5001683
5001682


M8 = 18Nm
M6 = 10Nm
M5 = 6Nm
M4 = 4Nm

For 12" wheel anti tippers go to page 2

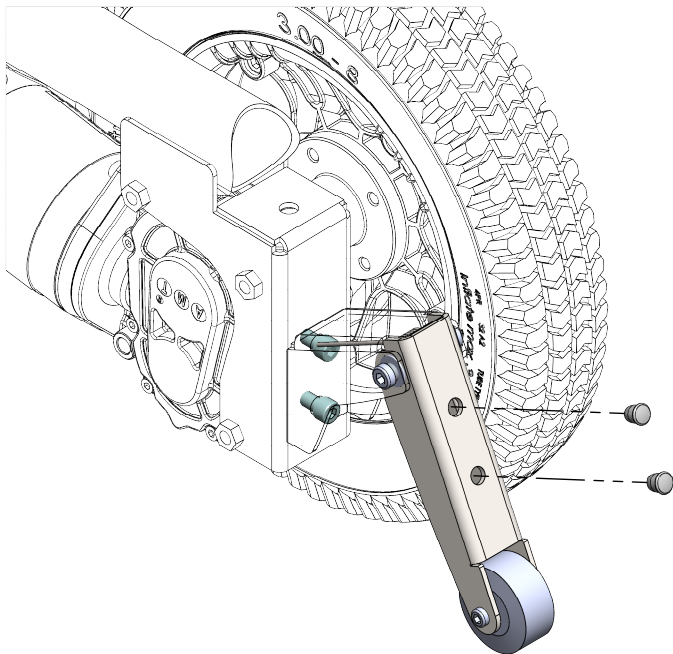

STEP 1

Remove both black plastic caps from anti tippers bracket

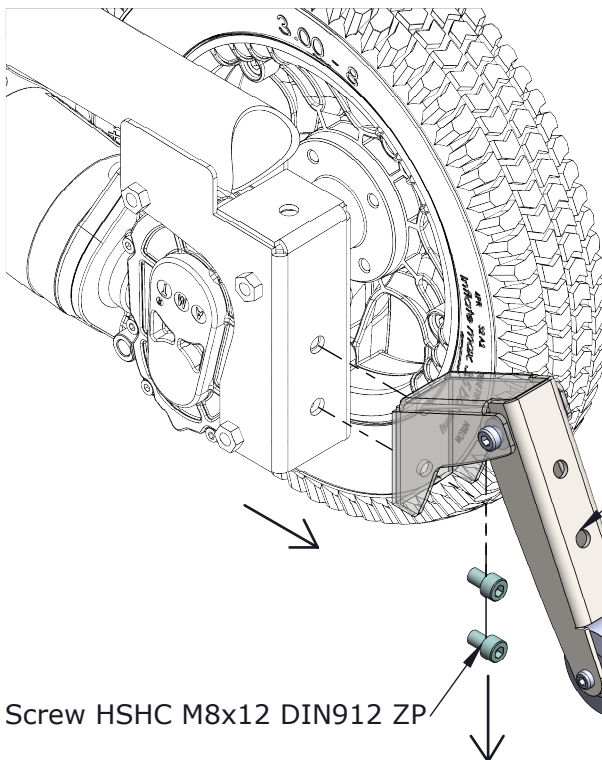

STEP 2

Remove old spring loaded anti tippers


Use hex key trough opening

Screw HSHC M8x12 DIN912 ZP

For mounting new spring loaded anti tippers follow the steps in reverse.

M8 = 18Nm
M6 = 10Nm
M5 = 6Nm
M4 = 4Nm

Instruction for spring loaded anti tippers for 12" wheels

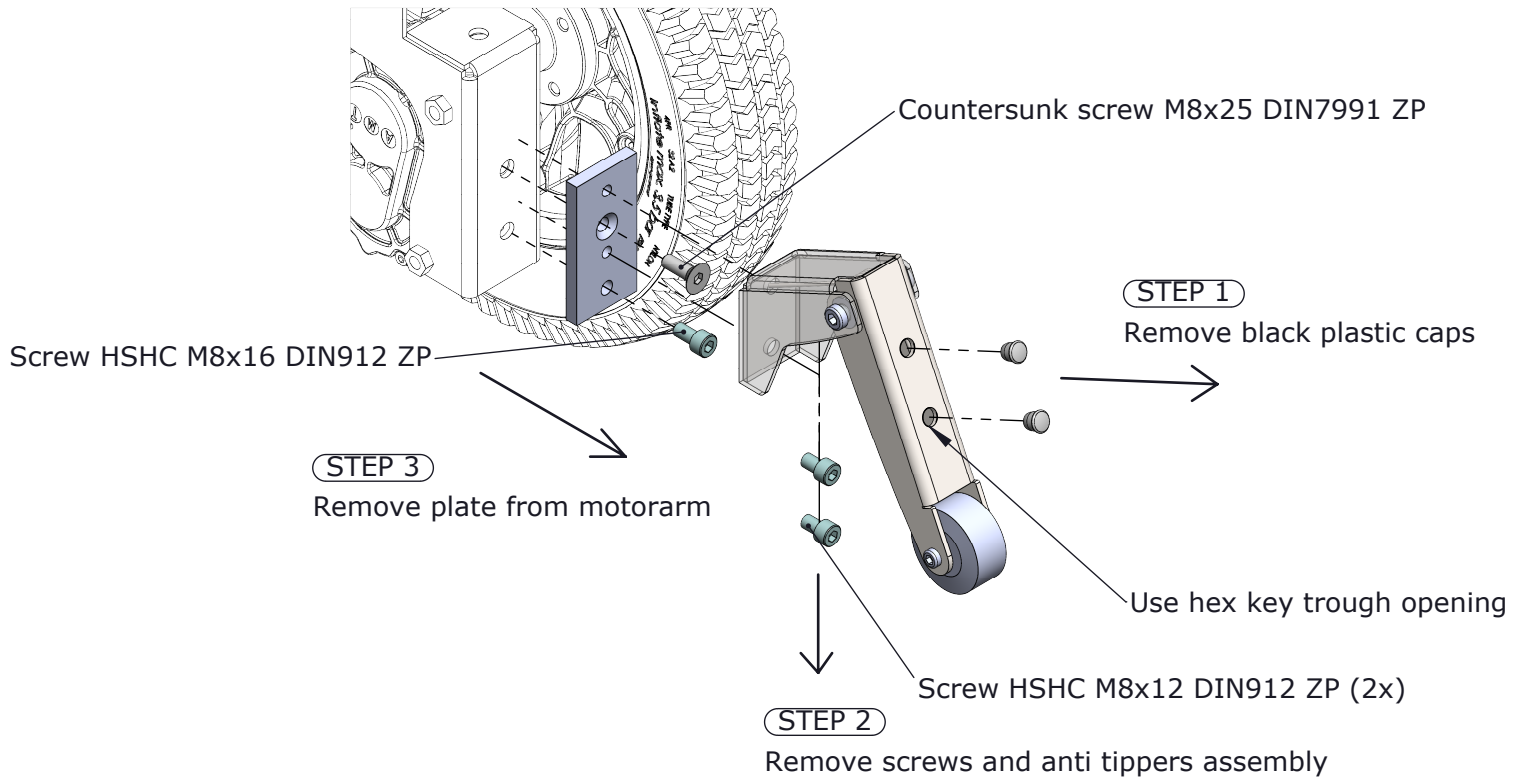

For mounting new spring loaded anti tippers follow the steps in reverse.